
SECTION 7 • OPTIO

B. WINTERIZING THE WATER SYSTEM

For winterizing the water system refer to *Section 8, Winterization Checklist For Boats Stored on Land, E. Water System.*

C. DISTRIBUTION MANIFOLD

The distribution manifold, located in the engine room, directs fresh water to the various equipment throughout the boat.

In the event of a water leak at one of the system components, ie. sink faucet, shower valve or spigot, the valve for that component can be closed. The rest of the system is left operational.

Example:

1. If the head sink cold water line develops a leak.
2. Close the Cold Head Sink valve on the manifold.
3. The rest of the water system remains operational while repairs are made to the head sink cold water line.
4. After repairs are made, turn on the Cold Head Sink valve.

NS & ACCESSORIES

D. WATER PUMP AND FILTER

The water pump and filter are located adjacent to the water tank under the forward stateroom bunk. The filter prevents particles from entering the pump head. The filter should be checked and cleaned once a season or when flow is restricted.

Before servicing the system, turn the FRESH WATER PUMP breaker OFF and open a faucet to release pressure on the system. To clean the filter, remove the screen and rinse with clean water. Replace, making sure the O-ring is in place when replacing the cover.

